

# USER MANUAL


(LED ceiling lamp with PIR sensor)



Thank you for choosing **WELL**. Please read carefully the following instructions and keep them within reach.




**CONNECTION-WIRE DIAGRAM:**

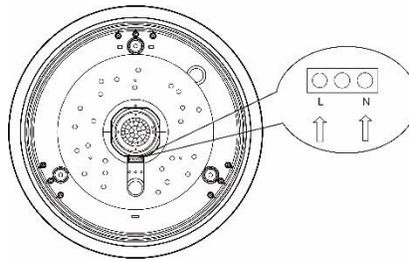


Connecting the power source into the "N" , "L" according to connection wire diagram when you install it.


**SENSOR INFORMATION:**

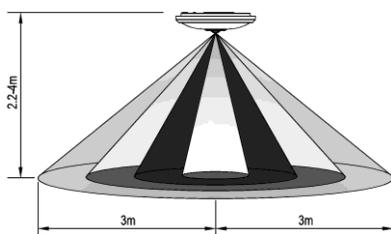

Height of installation: 2.2-4m

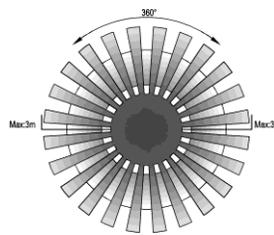

Detection Distance: Max.6m

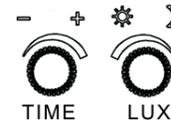

**TEST:**

- Turn the TIME knob anti-clockwise on the minimum. Turn the LUX knob clockwise on the maximum (sun).
- Switch on the power; the lamp will have no signal at the beginning. After Warm-up 30sec, the lamp can start work. If it receives the induction signal, the lamp will turn on. While there is no another induction signal any more, the lamp should stop working within 10sec±3sec.
- Turn LUX knob anti-clockwise on the minimum (moon). If the ambient light is more than 10LUX, the lamp should not work. If the ambient light is less than 10LUX (darkness), the sensor would work. Under no induction signal condition, the lamp should stop working within 10sec±3sec.

**Note: when testing in daylight, please turn LUX knob to ☀ (SUN) position, otherwise the sensor lamp could not work!**

**NOTE:**

- Should be installed by electrician or experienced person;
- Avoid installing it on the uneven object;
- There should be no hindrance and moving objects in front of the detection windows to affect detection;
- Avoid installing it near air temperature alteration zones such as air condition, central heating, etc;
- Considering your safety, please do not open the cover when you find the hitch after installation.

## **TROUBLESHOOTING:**

- The load do not work:
  - a. Please check if the connection-wiring of power and load is correct.
  - b. Please check if the load is good.
  - c. Please check if the working light sets correspond to ambient light.
- The sensitivity is poor:
  - a. Please check if there has any obstacle in front of the detection window that can block the receiving the signal.
  - b. Please check if the ambient temperature is too high.
  - c. Please check if the induction signal source is in the detection fields.
  - d. Please check if the installation height corresponds to the height showed in the instruction.
  - e. Please check if the moving orientation is correct.
- The sensor can not shut off the load automatically:
  - a. Please check if there is continual signal in the detection field.
  - b. Please check if the time delay is the longest.
  - c. Please check if the power corresponds to the instruction.
  - d. Please check if the temperature near the sensor change obviously, such as air condition or central heating etc.



Waste electrical and electronic equipment are a special waste category, collection, storage, transport, treatment and recycling are important because they can avoid environmental pollution and are harmful to health. Submitting waste electrical and electronic equipment to special collection centers makes the waste to be recycled properly and protecting the environment. Do not forget! Each electric appliance that arrives at the landfill, the field, pollutes the environment!



### **Importer & distributor:**

SC VITACOM ELECTRONICS SRL

CIF: RO 214527

Tel. 0264-438401\*

[sales@vitacom.ro](mailto:sales@vitacom.ro), [www.vitacom.ro](http://www.vitacom.ro)